

This document is our property. Reproduction or transmission without authorization is prohibited.

This document defines the contents of the passive PoE injector user manual. All the logo files can be found in the zip archive that contains this document file.

User manual contents:

PASSIVE PoE INJECTOR - USER MANUAL

Code	Description
4690004000	A KIT PoE PASSIF

WARNING / SAFETY PRECAUTIONS !

Ensure the right voltage and right polarities before connecting your end device

Connection :

Connect the RJ45 M (male) to one of the two EPV/ASV Ethernet RJ45
 Connect the red and black cable to the EPV/ASV 12Vdc or 24Vdc power source
 Connect the RJ45 F (female) to the end device through an Ethernet cable.

Pin Assignment:

	RJ45F		RJ45M	
PoE	1	← orange/white	→	1
	2	← orange	→	2
	3	← green/white	→	3
	6	← green	→	6
	4+5	← red	→	1
	7+8	← black	→	2

EPV/ASV Ethernet

EPV/ASV 12Vdc or 24Vdc



Power supplies

Aa	Creation		14/04/14	TG	
Issue	Modification	OM nb	Date	By	Checked



11,rue J.E.Dupuy BP66
 F-69543 CHAMPAGNE
 TEL : (33) 4 78 66 63 60
 FAX : (33) 4 78 47 54 33

**PASSIVE PoE INJECTOR
 USER MANUAL CONTENTS**

This document is our property.
 Reproduction or transmission without
 authorization is prohibited.

NOT140005Aa

1 / 1